



# ASUS Q400A-BHI7N03 Battery Replacement

Removing and replacing the battery for the ASUS Q400A-BHI7N03.

Written By: Matthew Gold




## INTRODUCTION


If the battery doesn't charge correctly, the battery needs to be replaced. This guide goes through the steps to remove the battery.

## Step 1 — Battery



- Turn off the laptop.
- Disconnect the charging cable from the laptop.

 Failure to unplug the cable could result in electric shock.


- Flip the laptop over so that it is upside down.
-  The slightly raised area is the battery.
- Orient the laptop so that the battery is away from you.

## Step 2



- In the top right corner, push the tab to the right to the unlocked position.

## Step 3

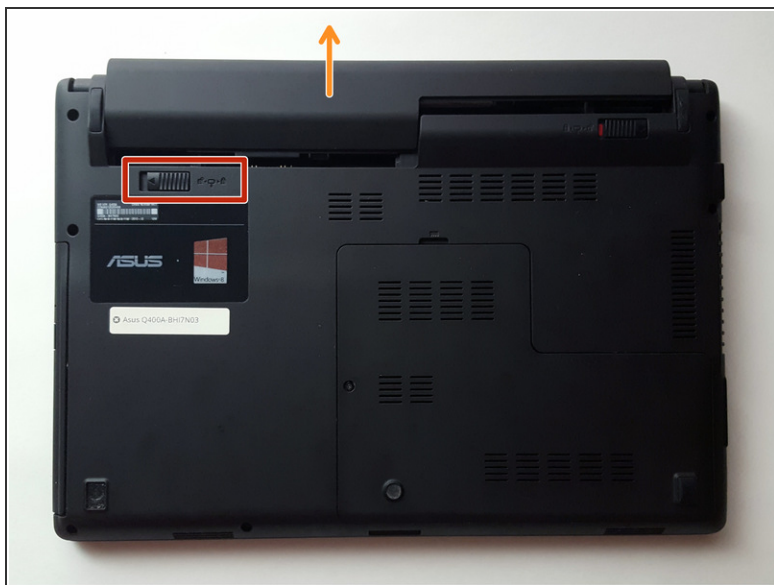

- Find the tab in the top left corner. With one finger, pull the tab to the left to the unlocked position.
- While holding this tab in the unlocked position, gently pull the battery away from you.

To reinsert your battery, follow these instructions in reverse order. Remember to re-lock the tab in step 2.

This document was last generated on 2017-06-18 09:50:42 PM.